

GGX3E SETUP INSTRUCTIONS





THANK YOU FOR YOUR PURCHASE!

If you have questions about installation, maintenance, or take down, please call us at (800)426-9496. Our goal is that you are completely satisfied with our products. Please read this installation manual carefully and follow all instructions contained herein. Please note that the installer is responsible for the site selection, installation and use. Do not erect during inclement weather and follow all safety procedures during the installation and take down process.

Please contact all utility companies for underground services. In many states, the utilities work together and have formed a Utility Locating Service. It is your responsibility to locate all the underground services, including speaking to the owner about irrigation, pool and other special services that they may have installed. Also, please note that special precautions should be taken such that any overhead powerlines are duly noted and avoided during the tent erection process.



TentCraft Inc in no way represents the estimated holding power to be true in all cases. It is an estimate, and as such, does not imply that the figures are sufficient to hold any tent securely in windy or adverse weather conditions. The tent installer accepts sole responsibility for the safe installation, teardown, and maintenance of any tent. TentCraft does not represent in any way that the materials provided with the purchase of the tent are sufficient enough to hold it up in windy or adverse weather conditions. There is no way for TentCraft to know the site conditions or the weather conditions at the event. This leaves us unable to recommend the adequate amount of holding power needed to hold the tent safely in position. Furthermore, we are not responsible for the methods which the installer uses to erect the tent or anchor it in position. Installers MUST be empowered to deem the tent unsafe for occupancy if/when the weather becomes unstable.



Step 1



Remove the GYBE from its backpack case.

Step 2



Unroll the GYBE onto a flat surface so that all four legs are extended out from the middle and the inflatable bladders are facing the ground. **BE SURE TO NOT STAND ON THE GYBE TENT**

Step 3



Locate the pump/battery pack and unzip the top. Insert the hose into the pump and set the dial to 41 KPA or 6 PSI (depending on the pump).

Step 4



Insert the opposite end of the hose into the inflation valve found on bottom of the GYBE leg. Turn on the pump and inflate the leg section until it reaches the proper pressure. **Pump will stop pumping once the desired level of pressure is reached** Replace the cap on the valve to maintain the pressure.



Step 5



Some GYBE models have more inflation valves than others. If the tent has legs that are not inflated yet, repeat the previous step to the remaining legs until all four are fully inflated and standing up.

Step 6



Lastly, anchor the tent by locating the sand/water bags. Fill the donut shaped weight and close the valve to keep the contents inside. Place the GYBE leg into the middle of the weight and bring the small rope pieces through the metal brackets on the tent leg – tying them off securely.

