

FLAG SPINDLES

SETUP INSTRUCTIONS



THANK YOU FOR YOUR PURCHASE!

If you have questions about installation, maintenance, or take down, please call us at (800)426-9496. Our goal is that you are completely satisfied with our products. Please read this installation manual carefully and follow all instructions contained herein. Please note that the installer is responsible for the site selection, installation and use. Do not erect during inclement weather and follow all safety procedures during the installation and take down process.

Please contact all utility companies for underground services. In many states, the utilities work together and have formed a Utility Locating Service. It is your responsibility to locate all the underground services, including speaking to the owner about irrigation, pool and other special services that they may have installed. Also, please note that special precautions should be taken such that any overhead powerlines are duly noted and avoided during the tent erection process.



TentCraft Inc in no way represents the estimated holding power to be true in all cases. It is an estimate, and as such, does not imply that the figures are sufficient to hold any tent securely in windy or adverse weather conditions. The tent installer accepts sole responsibility for the safe installation, teardown, and maintenance of any tent. TentCraft does not represent in any way that the materials provided with the purchase of the tent are sufficient enough to hold it up in windy or adverse weather conditions. There is no way for TentCraft to know the site conditions or the weather conditions at the event. This leaves us unable to recommend the adequate amount of holding power needed to hold the tent safely in position. Furthermore, we are not responsible for the methods which the installer uses to erect the tent or anchor it in position. Installers **MUST** be empowered to deem the tent unsafe for occupancy if/when the weather becomes unstable.

Step 1



Attach one of the two black plastic clamps around the tent leg at the desired height. Use the provided foam to put in between the clamps and the tent leg to protect the finish on the tent leg. Ensure that the open side of the black clamp is facing the outside of the tent.

Step 2



Hold the metal spindle in the opening of the bracket so that the holes in the spindle line up with the hole in the bracket. Install the spindle so that the skinny end is on the top and the wider end is on the bottom.

Step 3



Insert the black knob into the holes in the black bracket and through the spindle. Tighten the knob to attach the spindle to the tent leg. Repeat these three steps with the second black bracket.

Step 4



Install the flagpole (with flag attached) onto the top of the spindle.