

# PEAK FLAG

## SETUP INSTRUCTIONS



# THANK YOU FOR YOUR PURCHASE!

If you have questions about installation, maintenance, or take down, please call us at (800)426-9496. Our goal is that you are completely satisfied with our products. Please read this installation manual carefully and follow all instructions contained herein. Please note that the installer is responsible for the site selection, installation and use. Do not erect during inclement weather and follow all safety procedures during the installation and take down process.

Please contact all utility companies for underground services. In many states, the utilities work together and have formed a Utility Locating Service. It is your responsibility to locate all the underground services, including speaking to the owner about irrigation, pool and other special services that they may have installed. Also, please note that special precautions should be taken such that any overhead powerlines are duly noted and avoided during the tent erection process.



**TentCraft Inc in no way represents the estimated holding power to be true in all cases. It is an estimate, and as such, does not imply that the figures are sufficient to hold any tent securely in windy or adverse weather conditions. The tent installer accepts sole responsibility for the safe installation, teardown, and maintenance of any tent. TentCraft does not represent in any way that the materials provided with the purchase of the tent are sufficient enough to hold it up in windy or adverse weather conditions. There is no way for TentCraft to know the site conditions or the weather conditions at the event. This leaves us unable to recommend the adequate amount of holding power needed to hold the tent safely in position. Furthermore, we are not responsible for the methods which the installer uses to erect the tent or anchor it in position. Installers **MUST** be empowered to deem the tent unsafe for occupancy if/when the weather becomes unstable.**

## Step 1



Install the peak flag before the tent has been opened and the legs have been extended.

## Step 2



Remove the metal poles from the drawstring bag. Combine the two straight poles by slipping the longest pole down over the skinnier peg on the bottom pole.

## Step 3



Unfold the flag and lay it flat on the ground. Locate the vertical pole pocket along the edge. Feed the connected pole up through the bottom opening in the pole pocket until it comes through the top of the pole pocket.

## Step 4



Open the horizontal Velcro flap that runs along the top edge of the flag.

## Step 5



Find the L pole and insert the short side of this pole down into the vertical pole that was fed through the vertical pole pocket.

## Step 6



Fold the flap over the top L pole and secure with the Velcro strips.

## Step 7



Locate the peak cap on the top of the un-opened tent and uncap it to reveal the opening.

## Step 8



Place the flagpole down into the hole.

\*Be sure to insert the thicker end of the pole down into the peak cap.